


GT3000

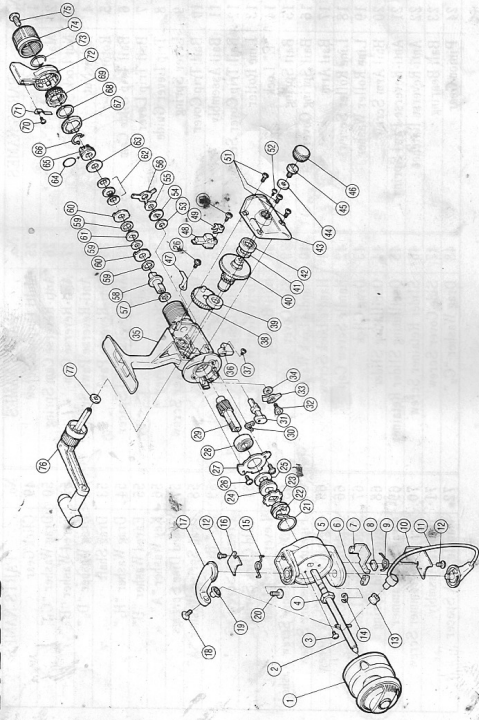

GT3000

No.	PARTS NAMES	No.	PARTS NAMES	No.	PARTS NAMES
1	Spool Assembly	27	Bearing Retainer	53	Drag Washer "C."
2	Main Shaft	28	Ball Bearing	54	Click Gear
3	Nut Lock Screw	29	Pinion Gear	55	Drag Washer "C."
4	Rotor Nut	30	Anti-Reverse Cam Spring	56	Eared Washer "Bf."
5	Rotor	31	Anti-Reverse Cam	57	Drag Washer "D."
6	Bail Trip Slide Cam	32	Anti-Reverse Pawl Screw	58	Drag Shaft
7	Bail Trip Lever	33	Anti-Reverse Pawl	59	Drag Washer "H."
8	Trip Lever Guide	34	Anti-Reverse Pawl Spacer	60	Eared Washer "B"
9	Lever Spring	35	Body	61	Eared Washer "A"
10	Bail Trip Cover	36	Anti-Reverse Lever	62	Coiled Disc Springs
11	Bail Assembly	37	Anti-Reverse Lever Screw	63	Drag Spring Washer "A"
12	Bail Trip Cover Screw	38	Oscillating Gear	64	"O" Ring
13	Line Roller	39	Bushing	65	Pressure Screw
14	"E" Lock	40	Drive Gear	66	Hold Click Spring
15	Bail Spring	41	Drive Gear Washer	67	Lever Click Gear
16	Bail Spring Cover	42	Ball Bearing	68	Fightin' Pressure Screw Washer
17	Bail Arm	43	Slide Cover	69	Fightin' Drag Click Screw
18	Line Roller Screw	44	Handle Lock Washer	70	Fightin' Drag Click
19	Line Roller Washer	45	Handle Lock Screw	71	Fightin' Drag Lever
20	Bail Arm Screw	46	Handle Screw Cap	72	Lever Hold Spring
21	Anti-Reverse Pawl Spring	47	Drag Click	73	Drag Programmer
22	Anti-Reverse Spring Holder	48	Oscillating Slider	74	Drag Assembly
23	Anti-Reverse Ratchet	49	Oscillating Slider Retainer	75	Handle Lock Spacer
24	Pinion Spacer A	50	Slider Retainer Screw	76	
25	Pinion Spacer B	51	Side Cover Screw A	77	
26	Multi Purpose Screw	52	Side Cover Screw B		